

Experts In Home Cleaning™



CLEANview™ **COMPACT pet**

מדריך למשתמש
דגם 51C1 - 220 וולט

 
- | | |
|---------------|------|
| תודה | 2 |
| הוראות בטיחות | 3 |
| מראה המוצר | 4 |
| הרכבה | 5 |
| הפעלה | 7-6 |
| תחזוקה וטיפול | 12-8 |
| פתרון בעיות | 13 |
| חלקי חילוף | 14 |
| שירות לקוחות | 15 |

אנו מודים לכם על שקניתם שואב CleanView Pet Compact Upright של BISSELL

אנו שמחים שרכשתם שואב CleanView Pet Compact Upright של BISSELL. כל מה שידוע לנו על טיפול ברצפות נכלל בתכנון ובייצור של מערכת הניקיון עתירת הטכנולוגיה הזאת לבית.

שואב האבק CleanView Pet Compact Upright של BISSELL שלכם בנוי היטב, ואנו מגבים אותו באחריות של שנה. כמו כן אנו עומדים מאחוריו עם מחלקת שירות לצרכן בעלת ידע וייעודית, כך שאם אי פעם תיתקלו בבעיות, תקבלו סיוע מהיר ומתחשב.

הסבא רבא שלי המציא את מטאטא רצפות בשנת 1876. BISSELL כיום היא חברה עולמית מובילה בתכנון, ייצור ושירות של מוצרים איכותיים לבית כמו שואב CleanView Pet Compact Upright של BISSELL. שוב תודה, מכולנו כאן ב-BISSELL.



מארק ג'. ביסל
יו"ר ומנכ"ל

הוראות בטיחות חשובות

- יש להוציא את התקע מהשקע לפני ניקוי המכשיר ולפני ביצוע בו פעולות תחזוקה.
- אם חוט החשמל ניזוק, כדי למנוע סיכון יש להחליפו אצל היצרן או אצל איש השירות.
- אין לשאוב חומרים רעילים (מלבין, אמוניה, נזל לפתיחת סתימות, דלק וכדומה).
- אין לאפשר להשתמש בשואב כבצעצו.
- אין להשתמש במכשיר למטרה אחרת מלבד זו המתוארת במדריך למשתמש.
- יש להשתמש רק באביזרים מומלצים על ידי היצרן.
- אין להשתמש כשאחד הפתחים חסום. יש לנקות מאבק, מוך, שערות או כל דבר אחר שעלול להפחית את זרימת האוויר.
- יש להחזיק את המכשיר על משטח ישר.
- יש לכבות את כל המתגים לפני ניתוק המכשיר מהחשמל.
- יש לפעול במשנה זהירות בעת ניקוי מדרגות.
- למכשיר זה בידוד כפול. יש להשתמש בחלקי חילוף זהים בלבד.
- אין להשתמש בשואב בהיעדר מיכל איסוף ומסננים.
- בעת שימוש במכשיר בסביבת ילדים יש להקדיש תשומת לב מירבית.
- אין לשאוב חפצים קשים או חדים כגון זכוכיות, ציפורניים, ברגים, מטבעות וכו'.

שמרו הוראות אלה לשימוש עתידי

דגם זה מיועד לשימוש ביתי בלבד.

חשוב


המכשיר נועד לשימוש במתח 220-240 וולט בתדר 50/60 הרץ בלבד.

בעת שימוש במכשיר חשמלי, יש להקפיד על אמצעי זהירות בסיסיים, ובכלל זה:

יש לקרוא את כל ההוראות לפני תחילת השימוש בשואב אבק העומד.

⚠ אזהרה: לצמצום סכנת שרפה, התחשמלות או פציעה:

- אין להשתמש מחוץ לבית או על שטחים רטובים.
- אין להשאיר את המכשיר מחובר לחשמל.
- אם פתיל הזינה ניזוק, כדי להימנע מסכנה החלפתו תיעשה ע"י היצרן, ע"י סוכן השירות שלו, או ע"י אדם מוסמך אחר.
- אם המכשיר אינו פועל כראוי, אם נשמט, ניזוק, הושאר מחוץ לבית, או לפל למים, יש להחזירו לאיש שירות.
- אין למשוך או לשאת את המכשיר מכבל החשמל, אין להשתמש בכבל כידית, אין לסגור את הדלת על הכבל או למשוך את הכבל מסביב לפינות או קצוות חדים, אין לדרוס את הכבל בשואב או לחשוף את כבל החשמל למשטחים מחוממים.
- אין למשוך את הכבל כדי לנתק את השואב מהחשמל. כדי לנתק את השואב מהחשמל, אחזו בתקע והוציאו אותו מהשקע.
- אין לגעת בתקע או במכשיר בידיים רטובות.
- אין לחשוף שיער, בגדים רפויים, אצבעות או חלקי גוף לפתחים או לחלקים נעים.
- אין לשאוב חפצים חמים או בוערים כגון סיגריות, גפרורים או אפר לוחש.
- אין לשאוב חומרים דליקים או בעירים (נוזל למצית, דלק, קרוסן, וכו') ואין להשתמש בנוכחות נוזלים או אדים נפצים.
- אין להשתמש בשואב בשטח סגור מלא באדים שמקורם בצבע שמן, מדלל, חומרים למניעת עש, אבק דליק, או אדים נפצים או רעילים אחרים.
- מכשיר זה אינו מיועד לשימוש על ידי אנשים (ובכלל זה ילדים) בעלי יכולות פיזיות, סנסוריות או מנטליות מוגבלות, או על ידי אנשים חסרי ניסיון וידע, אלא אם משגיח עליהם אדם שאחראי על בטיחותם או מנחה אותם כיצד להשתמש במכשיר.
- יש להשגיח על ילדים ולוודא שאינם משחקים עם המכשיר.

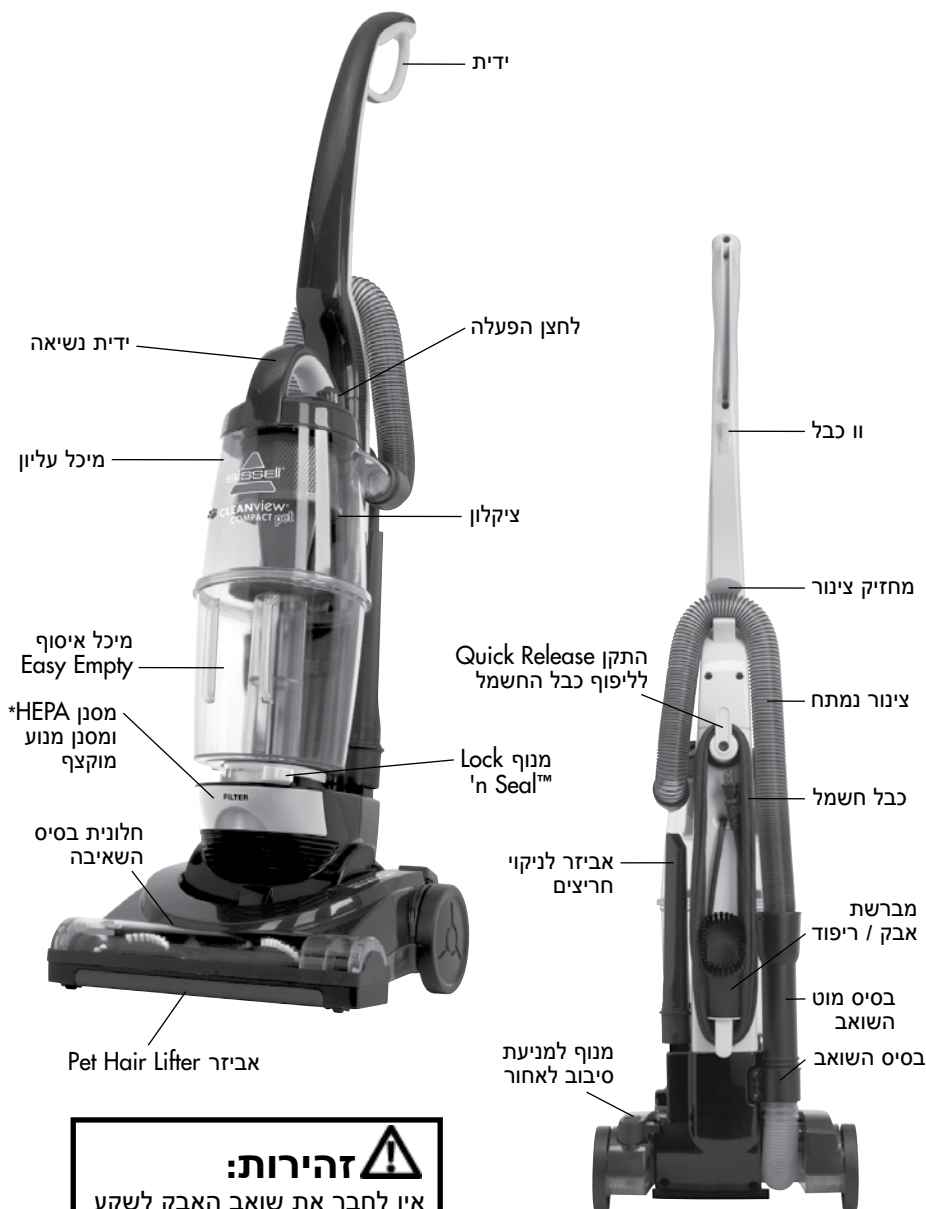

⚠️ זהירות:
אין לחבר את שואב האבק לשקע
לפני קריאת ההנחיות והוראות
ההפעלה.

*המסנן, לא השואב בכללותו, עומד
בתקן IEST-RP-CC001.5 HEPA


להרכבת שואב האבק שלכם כל שיידרש לכם הוא רק מברג.

חיבור הידית לשואב

1. מצאו את ידית השואב והסירו את אריזת הברגים שמוצמדת בדבק לידית.
2. העמידו את השואב ומחלקה האחורי של היחידה, החליקו את בסיס הידית בנחישות לתוך החריצים של החלק העליון של גוף השואב.
3. וודאו שהידית התחברה כראוי לגוף השואב. אם נשארו רווחים כלשהם, המשיכו לדחוף בנחישות עד לחיבור הידית כראוי.
4. הכניסו את הבורג שקיבלתם לתוך החור הקיים וחברו את הידית לגוף השואב. הבריגו היטב עם מברג.


חיבור צינור השואב והאביזרים

1. החליקו את קצה הצינור לתוך בסיס מוט השואב. חברו את הצינור אל תופסן הצינור.
2. **הערה: השואב לא יפעל בצורה אפקטיבית אם מוט השאיבה אינו מחובר אליו היטב.**
3. הניחו את אביזר החריצים על תופסן האחסון שבצידו השמאלי של המיכל (כשמסתכלים על השואב מאחור).
4. הניחו את מברשת האבק על תופסן האחסון שממוקם בהתקן התחתון לליפוף כבל החשמל.
4. לפפו את כבל החשמל סביב הווים לליפוף כבל החשמל.

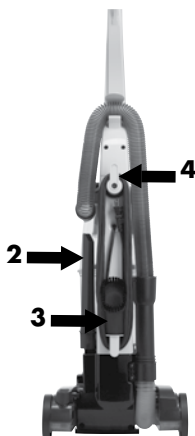

⚠️ זהירות:

לפני השימוש בשואב האבק, וודאו שמיכל האיסוף נעול במקומו ושכל המסננים (מעגלי פנימי, מעגלי חיצוני, לפני מנוע ואחרי המנוע) נמצאים במקומם. אין להפעיל את השואב ללא מסננים אלה.

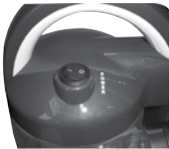

אביזר
Pet Hair Lifter



1



2

לחצן הפעלה

לחצן ההפעלה ממוקם בצידו השמאלי של השואב. לחצו על "ON" (I) כדי לשאוב, ועל "OFF" (O) כשסיימתם לנקות.

מצב ידית

לחצו ברגלכם על הדוושה לשחרור הידית שממוקמת בחלקו השמאלי התחתון של השואב, כדי להעמיד את השואב באחד משלושה מצבים.

1. עומד - לאחסון ולניקוי מעל לרצפה באמצעות אביזרים.
2. ניקוי רגיל - לחצו פעם אחת על הדוושה לשחרור הידית. השתמשו במצב זה לרוב משימות ניקוי הרצפות בבית.
3. ניקוי בגובה נמוך - כשהשואב במצב ניקוי רגיל, לחצו שנית על הדוושה לשחרור הידית. השתמשו במצב זה כדי לנקות מתחת לרהיטים נמוכים כגון שולחנות, כיסאות ומיטות.

Pet Hair Lifter אביזר

השתמשו בו כדי לשאוב את שיער חיות המחמד משטחים מכוסים בשטיחים. פשוט שאבו כרגיל. השואב ילכוד את שיער חיית המחמד כשאתם מושכים אחורה, וכשאתם דוחפים קדימה ישחרר אותו וישאב אותו.

הובלת השואב

כדי להזיז את השואב שלכם מחדר לחדר, הביאו את הידית למצב עומד, הטו את השואב אחורה והשעינו אותו על גלגליו האחוריים ודחפו קדימה.

אפשר להזיז את השואב גם על ידי שימוש בידית הנשיאה.

אביזרים מיוחדים

שואב האבק שלכם אינו רק שואב אבק עוצמתי לניקוי שטיחים ומרבדים. בעזרת אחד האביזרים המיוחדים אפשר להפוך אותו לשואב ורסטילי, שמנקה שטחים מעל לרצפה.

1. הרימו את הידית למצב עומד.

2. הסירו את הצינור מבסיס מוט השואב.

3. חברו את אחד האביזרים. לשם כך דחפו את האביזר בנחישות לתוך צינור השואב. סובבו חזק כדי לוודא שהצינור והאביזר מחוברים היטב זה לזה.

א. מברשת לשאיבת אבק: השתמשו לשאיבת רהיטים או ריפוד.

ב. אביזר לניקוי חריצים: השתמשו במרווחים צרים.

ג. אביזר **Pet Contour Tool™**: השתמשו בו כדי להגיע לפינות ולשולי המדרגות, ולשאיבת מסעדים ושטחים מעוגלים אחרים. אפשר לסובב את האביזר ולהשתמש בו בכל הכיוונים.

כבל חשמל

בתום השימוש בשואב, החזירו אותו למצב עומד ואחסנו את כבל החשמל.

1. כדי להשתמש בשואב, הסירו את כבל החשמל וחברו אותו לשקע חשמלי. לנוחותכם, קיים התקן לשחרור מהיר של הכבל. כמו כן, בחלקה העליון של הידית ישנו תופסן המיועד לכבל החשמל. בעת השאיבה, תוכלו לחבר אליו את הכבל.

2. כשסיימתם לנקות, כבו את השואב.



3. לניתוק כבל החשמל, אחזו בתקע (לא בכבל) ונתקו אותו מהשקע.

4. סובבו את הכבל סביב התופסנים לליפוף הכבל בחלקו האחורי של השואב. לפני שאתם מלפפים בחזרה את הכבל, וודאו תחילה שהחזרתם את התקן הליפוף למצבו ההתחלתי.

5. חברו את התקע לכבל, כדי לאבטח אותו.

שימו לב:

בזמן השאיבה, שטיחים מסוימים ותנאי לחות נמוכה עלולים ליצור חשמל סטטי. פריקות החשמל אינן מזיקות כלל ואינן קשורות בשום צורה לאספקת החשמל.

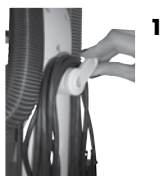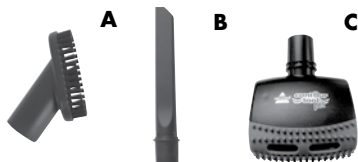

אזהרה:

כדי להפחית את סכנת ההתחשמלות, לפני ביצוע פעולות תחזוקה או בדיקות לפתרון בעיות כבו את מתג הכיבוי ונתקו את התקע מהשקע.

עצה:

להשגת ביצועי ניקוי מקסימאליים, בדקו ונקו או החליפו את כל המסננים בהתאם להמלצות.

כדי למקסם את ביצועי הניקיון ולהאריך את חייו של השואב שלכם, חשוב מאד שתרוקנו את מיכל האיסוף ותבדקו ותנקו או תחליפו את המסננים לעיתים קרובות. בצעו את צעדי התחזוקה הבאים:

1. רוקנו את מיכל האיסוף כשרמת הלכלוך מגיעה לקו "FULL" (מלא) שמשורטט על המיכל, או לעיתים קרובות יותר, כדי שיתמלא יתר על המידה. לביצועים מיטביים, רוקנו בתום כל שימוש.
2. בדקו את מסנן המנוע המוקצף ואת מסנן HEPA* לפחות פעם בחודש, נקו או החליפו לפי הצורך.
3. החליפו את מסנן HEPA* אם ניכר שביצועי השואב הולכים ופוחתים. החלפת המסנן בתדירות גבוהה יותר או פחות נדרשת בהתאם להרגלי השאיבה האישיים ולסוגי הלכלוך הנשאבים.

ריקון מיכל האיסוף

יש לרוקן את מיכל האיסוף תמיד לפני שרמת הלכלוך המצטברת בו מגיעה לקו "FULL" (מלא) שמשורטט על המיכל.

1. נתקו את השואב מהשקע החשמלי.
 2. נהעבירו את מנוף Lock 'n Seal למצב "Unlock" (פתוח).
 3. נאחזו בידית ומשכו את מיכל האיסוף ישר החוצה כדי להוציאו מהשואב.
 4. נרוקנו את הלכלוך לתוך פח אשפה.
- הערה: ריקון מיכל האיסוף בתום כל שימוש יסייע לכם למנוע שיתמלא יתר על המידה ויבטיח שהשואב יהיה מוכן לעבודה בפעם הבאה שתנקו.



*המסנן, לא השואב בכללותו, עומד בתקן HEPA 0.5 IEST-RP-CC001.

⚠ אזהרה:

אין להפעיל את השואב עם מסננים לחים או רטובים או כשהמסננים אינם במקומם.

שימו לב:

מוצר זה מיועד לשימוש ביתי בלבד ואינו מיועד לשימוש מסחרי או תעשייתי. שאיבת אבק ממוצרים כגון גבס, בטון או אפר תזיק למנוע ותבטל את האחריות.



ניקוי או החלפה של מסנן המנוע המוקצף ושל מסנן HEPA*

1. נתקו את השואב מהשקע החשמלי.
2. מסנן המנוע המוקצף מגן על המנוע מפני חלקיקי לכלוך. הוא ממוקם במגש ההחלקה שמתחת למיכל האיסוף. אם המסנן התמלא לכלוך, משכו את המגש, הרימו את פד המסנן המוקצף ונקו אותו.
- הערה: אפשר לשטוף את מסנן המנוע המוקצף ביד, במים קרים עם חומר ניקוי עדין. שטפו אותו ויבשו אותו היטב באוויר לפני החזרתו למקומו.
3. מסנן HEPA* מסייע בתהליך הסינון כדי להחזיר אוויר נקי לחדר. הוא ממוקם מתחת למסנן שלפני המנוע במגש הנשלף שמתחת למיכל האיסוף. אם המסנן התלכלך, הסירו את המגש, הוציאו את מסנן HEPA והחליפו אותו.
- הערה: מסנן HEPA* הוא מסנן קפלים לבן. מסנן זה אינו רחיץ ויש להחליפו כשהוא מתלכלך.

מגן תרמי

שואב האבק שברשותכם כולל מגן תרמי פנימי שנועד להגן עליו מפני התחממות יתר. אם מופעל המגן התרמי, מנוע השואב מפסיק לפעול.


אם זה קורה:

1. כבו את השואב ונתקו משקע החשמל.
2. רוקנו את מיכל האיסוף, בדקו שהמסננים ומעברי האוויר אינם חסומים כתוצאה מהצטברות לכלוך.
3. המגן התרמי מתאפס אוטומטית לאחר כשעה. אם המגן התרמי לא התאפס, פנו אל שירותי הלקוחות של BISSELL.


*המסנן, לא השואב בכללותו, עומד בתקן IEST-RP-CC001.5 HEPA.

אזהרה:

כדי להפחית את סכנת הפציעה מחלקים נעים, כבו את מתג הכיבוי ונתקו את התקע מהשקע.

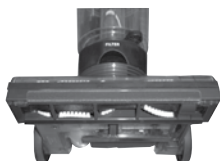

2

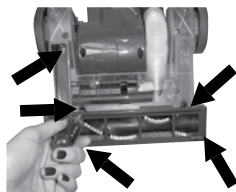

3



4

בדיקת מברשת הרצפה המסתובבת

וחגורת מנוע

עליכם לבדוק בקביעות את מידת הבלאי של מברשת הרצפה המסתובבת של השואב שלכם ואת רצועת המנוע. כמו כן עליכם לנקות את המברשת ואת קצוות המברשת מחוטים, שיערות וסיבי שטיחים. לכלוך מסוג זה יכולים להילכד מסביב למברשת ולמנוע ממנה לנקות בצורה יעילה את השטיחים. כמו כן הסירו כל לכלוך שמצטבר מתחת למכסה המברשת.

1. נתקו את השואב מהשקע החשמלי.
2. הציבו את הידית במצב נמוך והפכו את שואב האבק כך שחלקו התחתון פונה כלפי מעלה.
3. הסירו את חמשת הברגים ממכסה המברשת, כפי שמתואר בתמונה. הסירו את מכסה המברשת.
4. אחזו במברשת הרצפה המסתובבת משני הקצוות והרימו אותה.
5. נקו חוטים, שיערות ולכלוך אחר ממברשת הרצפה המסתובבת, שימו לב במיוחד לקצוות המבקשת.
6. נקו חוטים, שיערות ולכלוך אחר מגלגלת המנוע ואזורי חגורת המנוע.
7. בדקו את חגורת המנוע בקפידה אם אין בה בלאי, חתכים או אזורי פגומים.
8. בדקו שמעברי האוויר אינם חסומים. הוציאו פסולת מאזורים אלה.
9. בתום הניקיון, החזירו למקום את מברשת הרצפה ואת חגורת המנוע. החזירו את מכסה המברשת והבריגו את חמשת הברגים.

החלפת רצועת המנוע

1. נתקו את שואב האבק מהשקע החשמלי.

2. לאחר שהסרתם את מברשת הרצפה המסתובבת מהשואב (ראו עמוד 10, צעדים 1 - 4 של בדיקת מברשת רצפה מסתובבת ורצועת מנוע), אחזו ברצועת המנוע הישנה והסירו אותה מגלגלת המנוע. זרקו את רצועת המנוע הישנה.



3. שימו רצועת מנוע חדשה על גלגלת המנוע ולפפו את הקצה האחר מסביב למברשת הרצפה המסתובבת, ברווח שבין הזיפים.

הערה: חשוב שתשתמשו רק ברצועות מקוריות של BISSELL. רצועות גנריות עלולות שלא להתאים למפרט המדויק הנדרש לשואב האבק שלכם כדי לפעול ולתת ביצועים אופטימאליים. השימוש ברצועות לא מקוריות עלול להוביל לכשל מוקדם של השואב ולבטל את האחריות שלכם.

4. משכו את מברשת הרצפה המסתובבת בנחישות למקומה, מתחו את רצועת המנוע, ושימו את קצה המברשת הרצפה המסתובבת למטה לתוך החריצים שבצדדים, כפי שרואים. יישור של קצוות המברשת בחריצים עשוי להיות נחוץ כדי להכניס במלואה את המברשת.

5. סובבו את מברשת הרצפה המסתובבת ידנית מספר פעמים בכיוון של גלגלת המנוע. אם הותקנה כראוי, חגורת המנוע תמרכז את עצמה על כתר מברשת הרצפה המסתובבת.

6. החזירו למקומו את מכסה המברשת והבריגו את כל חמשת הבריגים.

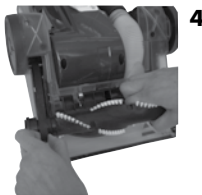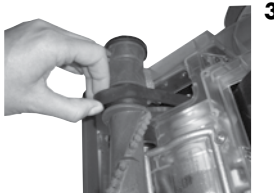

⚠️ זהירות:

כדי להפחית את סכנת הפציעה מחלקים נעים, כבו את מתג הכיבוי ונתקו את התקע מהשקע.

הסרת חסימות

עוצמת שאיבה נמוכה, ניקוי גרוע או חוסר שאיבה עשויים להיגרם כתוצאה מחסימה בשואב האבק. אם שמתם לב לשינוי בצליל המנוע, בדקו חסימות.

1. כבו את השואב. נתקו את השואב מהשקע החשמלי.
2. רוקנו את מיכל האיסוף.
3. בדקו שאין הצטברות של לכלוך או חסימות במיכל העליון.
4. אם שמתם לב לחסימה במיכל העליון, הסירו את הציקלון הפנימי (ראו להלן את החלק "ניקוי המיכל העליון").
5. אחזו בצינור והפרידו אותו מבסיס מוט השואב. בדקו חסימה בבסיס, במוט או בצינור עצמו.
6. הסירו את צינור Twist 'n Snap מהשואב על ידי סיבוב שמאלה. ישרו את הצינור ונקו חסימה עם חפץ ארוך וצר, לדוגמה מקל של מטאטא.
7. אם החסימה נמשכת, עקבו אחר ההוראות ל"בדיקת מברשת הרצפה המסתובבת וחגורת המנוע" בעמוד 10 ובדקו שמעברי האוויר אינם חסומים.

ניקוי המיכל העליון

1. אחזו בציקלון הפנימי וסובבו שמאלה עד שלשוניות הנעילה מפסיקות את הסיבוב. משכו למטה מהמיכל העליון כדי להסירו אותו.
2. נגבו את החלק הפנימי של המיכל העליון ואת הציקלון הפנימי במטלית לחה מורטבת במים או בתמיסת ניקוי עדינה.
3. אפשר לשטוף את הציקלון הפנימי בחומר ניקוי עדין. וודאו שהוא יבש לגמרי לפני שאתם שבים ומרכיבים אותו אחרת אתם עשויים לגרום לשואב שלכם נזק.
4. בתום הניקוי, החזירו את הציקלון הפנימי למקומו על ידי החלקתו לתוך התושבת העליונה. ישרו את הציקלון הפנימי על ידי בדיקה שהלשוניות שעל הציקלון ממוקמות כלפי חזית השואב. דחפו פנימה את הציקלון הפנימי וסובבו אותו ימינה עד שלשוניות הנעילה מפסיקות את הסיבוב.



אזהרה:

כדי להפחית את סכנת ההתחשמלות, לפני ביצוע פעולות תחזוקה או בדיקת בעיה כלשהיא במהלך שאיבה, כבו את השואב ונתקו את התקע מהשקע.

השואב אינו מסתובב**סיבות אפשריות**

1. כבל החשמל אינו מחובר לחשמל
2. כבל החשמל ניזוק

פתרונות

1. בדקו את התקע
2. נתקו, בדקו אם יש נזקים, במידת הצורך דאגו להחליף את הכבל במרכז שירות מוסמך

השואב אינו שואב את הלכלוך**סיבות אפשריות**

1. הצינור אינו מחובר לפתח השאיבה
2. קיים סדק או חור בצינור
3. חגורת המנוע שבורה או בלוייה
4. זיפי מברשת הרצפה המסתובבת
5. מברשת הרצפה המסתובבת תקועה
6. חסימה בשואב
7. מיכל האיסוף מלא
8. מיכל האיסוף או המיכל העליון
9. המסננים מלוכלכים

פתרונות

1. אחזו בידית Quick Reach ודחפו בנחישות את מוט השואב לתוך פתח השאיבה
2. בדקו את הצינור והחליפו אותו במידת הצורך
3. החליפו חגורת מנוע, ראו עמוד 11
4. החליפו מברשת בלויים
5. הסירו את המברשת ונקו את הלכלוך מקצוות המברשת
6. עקבו אחר ההוראות לניקוי חסימות בעמוד 12
7. רוקנו את מיכל האיסוף
8. מקמו כראוי ונעלה במקום לא הותקנו כראוי
9. בדקו ונקו או החליפו את המסננים, ראו עמוד 9

לכלוך נראה לעין בורח מהשואב**סיבות אפשריות**

1. מיכל האיסוף מלא
2. המסננים חסרים או שאינם
3. מיכל האיסוף אינו מותקן כראוי


פתרונות

1. רוקנו את מיכל האיסוף
2. בדקו שהמסנן המוקצף והמסננים הותקנו כראוי מותקנים כראוי
3. הוציאו אותו והכניסו בחזרה את מיכל האיסוף בצורה נכונה

פעולות תחזוקה או שירות אחרות שאינן נכללות במדריך זה יבוצעו על ידי אנשי שירות מוסמכים.

אנו מודים לכם על בחירתכם במוצר של BISSELL.

שם חלק	מק"ט	פריט
מיכל איסוף	203-2166	1
צינור	203-2165	2
מסנן מנוע מוקצף	203-2171	3
מסנן HEPA*	203-2172	4
אביזר לניקוי חריצים	203-2164	5
מברשת אבק / מברשת ריפוד	203-1527	6
אביזר Pet Contour™	203-1291	7

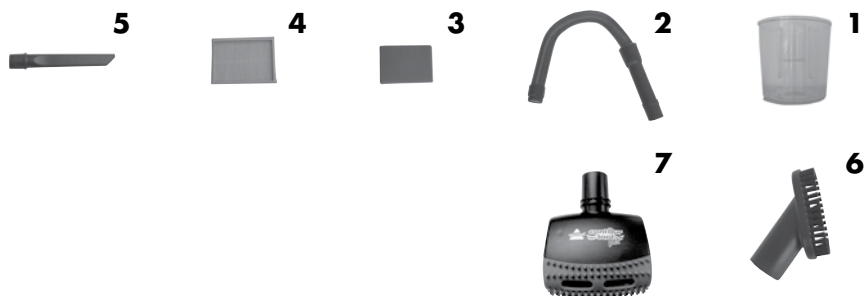

*המסנן, לא השואב בכללותו, עומד בתקן HEPA 5. IEST-RP-CC001.

אם נחוץ לך שירות למוצר של BISSELL שברשותך:

התקשר אל שירות הלקוחות של BISSELL למספרים שמופיעים למטה ואנו נמסור לך את פרטי מרכז שירות הלקוחות המורשה של BISSELL באזורך. עבור כל הארצות האחרות, פנו אל המפיץ בארץ שלכם בשאלות, שירות או תיקונים.

לשאלות בנושא אחריות ולחלקי חילוף, התקשרו אל המספרים שלמטה.

פניות בישראל:

ראשון - חמישי 08:00 - 17:00

אלקטרה מוצרי צריכה 1951 בע"מ

רח' ספיר 1

אזור תעשייה חדש

ראשון לציון 75704

ישראל

טלפון: 039633030

פניות מהמזרח התיכון ואפריקה:

ראשון - חמישי 09:00 - 18:00

BISSELL Middle East FZE

PO Box 61286

Office 017, Technopark Building

Jebel Ali Free Zone

Dubai

United Arab Emirates

טלפון: 971-4-881-8597

או בקרו באתר של BISSELL -

www.bissell.com

בעת פנייה אל BISSELL, הכינו מראש את מספר הדגם של שואב האבק.

נא רשמו את מספר הדגם שלכם: _____

נא רשמו את תאריך הרכישה שלכם: _____



Experts In Home Cleaning™

©2012 BISSELL Homecare, Inc.
Grand Rapids, Michigan

כל הזכויות שמורות. הודפס בסין

מק"ט 110-4583

גרסה 5/12

בקרו באתר שלנו בכתובת: www.bissell.com





תוקף תעודה זו מותנה בצירוף חשבונית קנייה מקורית

היצרן: BISSELL
היבואן: אלקטרה מוצרי צריכה (1951) בע"מ מרח' שמעון ישראלי 3,
את.חדש ראשל"צ, טל: 03-9633030.
סוג המכשיר: שואב אבק BISSELL
דגם: 51C1

אנו אחראים בזאת לפעולתו התקינה של המכשיר לתקופה של שנה
מתאריך האספקה.

אחריות זו לא תחול במקרים הבאים:

1. קלקול הנובע מהפעלה שלא לפי הוראות השימוש.
 2. קלקול עקב אספקת חשמל לא סדירה.
 3. שבר מכל סיבה שהיא.
 4. תקלה שנגרמה כתוצאה מגורמים חיצוניים: שריפה, גשם, ברק וכד'.
 5. נעשה שימוש במכשיר למטרות מסחריות.
 6. החלפת שקיות אבק, מסננים ורפידות אינה כלולה באחריות.
- האחריות האמורה תקפה בתנאי ששואב האבק יובא לתיקון בצירוף תעודה זו,
כשהיא חתומה ע"י הסוחר ובצירוף חשבונית הקניה, **למעבדות המפורטות על הכריכה האחורית של חוברת זו.**
כל טיפול או תיקון שלא באמצעות המעבדות האמורות יגרום לביטולה של אחריות זו.

פרטים למילוי על ידי הסוחר

שם הקונה: _____

תאריך המכירה: _____

חתימת הסוחר: _____

שם וכתובת הסוחר: _____

תחנות שירות ברחבי הארץ


08-6378368 טל:	סלון ששון, א.ת. חדש	1. אילת
08-8525104 טל:	חשמל קמי, מרכז מסחרי ב' חנות 24	2. אשדוד
08-6271410 טל:	מאור הנגב 96, רח' יאיר 27	3. באר שבע
08-6274563		
04-6326088 טל:	אחים איטח, הנשיא 53	4. חדרה
04-8671507 טל:	שירות רם, רח' ביאליק 9	5. חיפה
04-8620162		
04-8227227	- סניף נווה שאנן, רח' טרומפלדור 29	
04-8720642	- סניף קריות, שד' ההסתדרות 279	
04-9832011 טל:	שרות רם האלונים 97	6. טבעון
04-6720991 טל:	המקלט, רח' הגלבוע 5	7. טבריה
02-6241741 טל:	שירות כל, רח' הגידם 1	8. ירושלים
08-9465678 טל:	חשמל אדיר, רח' עמק האלה 80,	9. מודיעין
09-7603355 טל:	שי קור המעבדה, דוד אלעזר 6	10. כפר סבא
09-8337733 טל:	בר מנחם נחום, רח' רמז 15	11. נתניה
04-6522357 טל:	חשמל דושניצקי, שד' ארלזרוב 6	12. עפולה
04-8764559 טל:	ס.א.פ, רח' החרושת 28, א.ת. קרית ביאליק	13. קרית ביאליק
04-6903674 טל:	שירות רם סחר, רח' רסקו 44	14. קריית שמונה
03-9666105 טל:	השחזות ראשון, רח' עין הקורא 11	15. ראשון לציון
03-7511145 טל:	אלקטרו ברק, רח' התקווה 25	16. רמת גן
03-5477745 טל:	מעבדות השרון, ויצמן 1 פינת סוקולוב	17. רמת השרון
09-7603387 טל:	טל אור, רח' עקיבא 1	18. רעננה
03-5371015 טל:	אלקטרו מור, רח' לה גרדיה 22	19. תל אביב
03-6830191 טל:	אליאס, רח' העליה 20	20. תל אביב
	י. רובין מכשירי גילוח בע"מ, רח'	21. תל אביב
3-6872161 טל:	יסוד המעלה 8	

כתובתנו באינטרנט: <http://www.electra-consumer.co.il>

לקוחות נכבדים,
החברה שומרת לעצמה את הזכות לשנות את המפרטים המצוינים בהוראות ההפעלה
ללא הודעה מוקדמת, ומבלי שתחול עליה חבות כל שהיא עקב כך.

שירות ואחריות
אלקטרה

רח' שמעון ישראלי 3, א.ת. חדש, ראשון לציון, מיקוד 75143 טל" 03-9633030

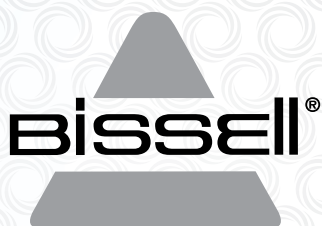

Experts In Home Cleaning™

CLEANview™ **COMPACT pet**

USER'S GUIDE
51C1 SERIES 220-240V

- 2 Thank You
- 3 Safety Instructions
- 4 Product View
- 5 Assembly
- 6-7 Operations
- 8-12 Maintenance and Care
- 13 Troubleshooting
- 14 Replacement Parts
- 15 Consumer Care



 
Thanks for buying a BISSELL CleanView Pet Compact Upright

We're glad you purchased a BISSELL CleanView Pet Compact Upright vacuum. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL CleanView Pet Compact Upright vacuum is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL CleanView Pet Compact Upright vacuum.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR UPRIGHT VACUUM.

WARNING: To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- Do not leave machine when it is plugged in.
- Do not use with damaged cord or plug.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service agent.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces.
- Do not unplug by pulling on cord. Unplug by grasping plug.
- Do not handle plug or appliance with wet hands.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not pick up hot or burning objects such as cigarettes, matches, or hot ashes.
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapour.
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours.
- Not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play with the appliance.
- Remove plug from electrical outlet before cleaning or maintaining the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.).
- Do not allow to be used as a toy.
- Do not use for any purpose other than described in this User's Guide.
- Use only manufacturer's recommended attachments.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep appliance on a level surface.
- Turn off all controls before unplugging.
- Be extra careful when cleaning stairs.
- This appliance is provided with double insulation. Use only identical replacement parts.
- Do not use without the dirt container and filters in place.
- Pay close attention when working around children.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.


SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

IMPORTANT FOR OPERATION ON A 220-240 VOLT A.C. 50/60 Hz POWER SUPPLY ONLY.

If your appliance is fitted with a nonrewireable BS 1363 plug it must not be used unless a 13 amp (ASTA approved to BS 1362) fuse is fitted in the carrier contained in the plug. (Spares may be obtained from your BISSELL supplier). If for any reason the plug is cut off, it must be disposed of, as it is an electric shock hazard should it be inserted into a mains socket.

Product view

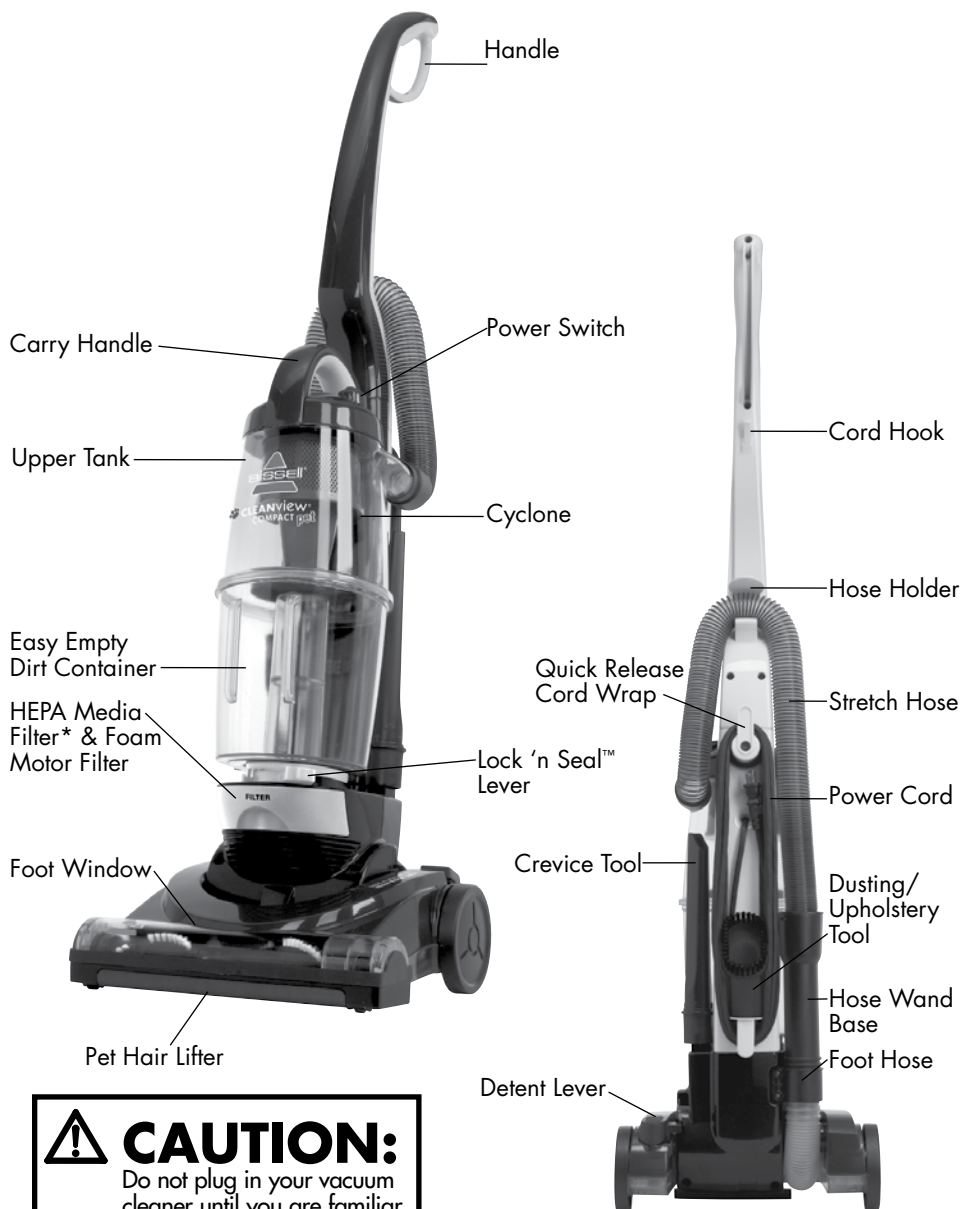

CAUTION:

Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.

*The filter, media, not the vacuum as a whole, complies with the IEST-RP-CC001.5 HEPA Standard

Assembly

The only tool you'll need to assemble your vacuum is a screwdriver.

Attach handle to vacuum

1. Locate the vacuum handle and remove the screw packet taped to the handle.
2. Stand the vacuum upright and from the rear of the unit, slide the base of the handle firmly into the grooves at the top of the vacuum body.
3. Ensure the handle fits firmly to the vacuum body. If there are any gaps, continue to push firmly until the handle is secure.
4. Insert the provided screw into the existing hole, attaching the handle to the body of the vacuum. Tighten securely with a screwdriver.

2



4



Attach vacuum hose and tools

1. Slide the end of the hose into the hose wand base. Snap the hose into the hose clip.
Note: The vacuum will not operate effectively unless the hose wand is firmly attached.
2. Place the crevice tool on the storage clip on the left side of the tank (when viewing vacuum from rear.)
3. Place the dusting brush on the storage clip located on the lower cord wrap.
4. Wrap power cord around cord wraps.

1



2



3



4



Operations

Power Switch

The power switch is located on the left side of the vacuum. Push the rocker switch "ON" (1) to vacuum, and "OFF" (0) when cleaning is complete.

Handle position

Press the handle release pedal, located on the lower left side of the vacuum, with your foot to place your vacuum into one of three cleaning positions.

1. **Upright-** For storage and above floor cleaning with tools.
2. **Normal Cleaning-** Press handle release pedal once. Use for most household floor cleaning tasks.
3. **Low Cleaning-** With the vacuum in normal cleaning position, press handle release pedal again. Use for reaching under low furniture such as tables, chairs and beds.

Pet Hair Lifter

Use to pick up pet hair from carpeted surfaces. Just vacuum like you normally would. The vacuum will grab pet hair when you pull back and it will release hair and suction it up when you push forward.

Transporting cleaner

To move your vacuum from room to room, put the handle in the upright position, tilt the vacuum back on its rear wheels and push forward.

The vacuum can also be moved by using the carry handle.



CAUTION:

Before using your vacuum, make sure that the dirt container is in locked position and that all filters (inner circular, outer circular, pre-motor and post-motor) are in place. Do not operate your vacuum without these filters.



Pet Hair Lifter



Operations

Special tools


Your vacuum is not only a powerful carpet and rug vacuum cleaner, it's also a versatile above floor vacuum cleaner when you select one of the special tools.

1. Raise handle to upright position.
2. Remove hose from hose wand base.
3. Attach one of the tools by firmly pushing it onto the vacuum hose. Be sure the hose and tool fit together by twisting tightly.

- A. Dusting Brush:** Use on furniture or upholstery.
- B. Crevice Tool:** Use in tight, narrow spaces.
- C. Pet Contour Tool™:** Use to reach into corners and edges on stairs, as well as armrests and other curved surfaces. The tool can be flipped to use in any direction.

NOTICE:


While vacuuming, certain carpets and low humidity conditions may generate small static discharges. The discharges are entirely harmless and are not associated in any way with the main power supply.

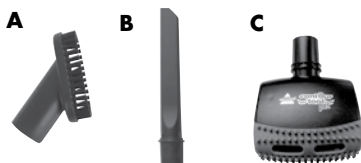

Power cord

When you are done using your vacuum, return it to the upright position and store the power cord.

1. To use your vacuum, remove the cord and plug it into an electrical outlet. For your convenience, there is a quick release cord wrap for easy cord removal. There is also a cord clip that is part of the upper handle where you can attach the cord when vacuuming.
2. When you are finished cleaning, turn the vacuum cleaner off.
3. Unplug power cord by grasping the plug (NOT the cord) and disconnect from outlet.
4. Loop power cord around cord wraps on back of vacuum cleaner. Be sure to first return the quick release cord wrap back to its original position before wrapping cord.
5. Clip molded plug to power cord to secure.

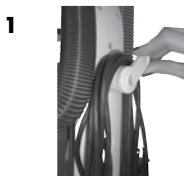

Maintenance and care

To maximize your cleaning performance and extend the life of your vacuum, it is very important that you empty your dirt container and check and clean or replace your filters frequently. Perform the following maintenance steps:

1. Empty the dirt container when the dirt reaches the "full" line on the dirt container, or more frequently, to prevent overfills. For best performance, empty after each use.
2. Check the foam motor filter and the HEPA media filter* at least once a month, clean or replace as needed.
3. The HEPA media filter* should be replaced if machine performance is noticeable declining. More or less frequent replacing may be required based on individual vacuuming habits and types of debris picked up.

Emptying dirt container

The dirt container should be emptied before the dirt reaches the "full" line on the container.

1. Unplug the vacuum from electrical outlet.
2. Slide the Lock 'n Seal lever to the "unlock" position.
3. Grasp handle and pull the dirt container straight out to remove from the vacuum.
4. Empty dirt into garbage container.

NOTE: Emptying the dirt container after every use will help prevent over filling and ensure that the vacuum is ready to go the next time you clean.



WARNING:

To reduce the risk of electric shock, turn power switch OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

Tip:

For maximum cleaning performance, check and clean or replace all filters as suggested.

3



*The filter, media, not the vacuum as a whole, complies with the IEST-RP-CC001.5 HEPA Standard

Maintenance and care

Cleaning or replacing the foam motor and HEPA media filter*

1. Unplug the vacuum from electrical outlet.
2. The foam motor filter protects the motor from dirt particles. It is located in the slide out tray underneath the dirt container. If the filter becomes dirty, pull out the tray, lift out the foam filter pad and clean it.

NOTE: The foam motor filter may be hand washed in cold water with mild detergent. Rinse well and air dry thoroughly before replacing.

3. The HEPA media filter* assists in the filtration process to return clean air to the room. It is located beneath the pre-motor filter in the slide out tray housed underneath the dirt container. If the filter becomes dirty, remove the tray, remove and replace the HEPA media filter*.

NOTE: The HEPA media filter* is white pleated filter. This filter is NOT washable and must be replaced when it becomes dirty



WARNING:

Do not operate cleaner with damp or wet filters or without all filters in place.


NOTICE:

This product is intended for household use only and not for commercial or industrial use. Vacuuming of dust from products like plaster, concrete or ashes will damage the motor and void the warranty.

Thermal Protector

An internal thermal protector has been designed into your vacuum to protect it from overheating. When the thermal protector activates, the vacuum motor will stop operating. If this happens:

1. Turn the vacuum OFF and unplug from electrical outlet.
2. Empty the dirt container, check filters and air passages for dirt accumulation.
3. The thermal protector automatically resets after approximately one hour. If the thermal protector does not reset, call BISSELL Consumer Services.

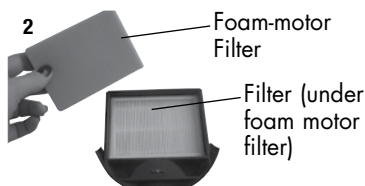

*The filter, media, not the vacuum as a whole, complies with the IEST-RP-CC001.5 HEPA Standard

Maintenance and care

Check rotating floor brush and drive belt

You should check your vacuum cleaner's rotating floor brush and drive belt regularly for wear or damage. You should also clean the brush and brush ends of strings, hair and carpet fibers. This type of debris can wrap around the brush and hamper its ability to effectively clean your carpet. Also remove any debris that has accumulated under the brush cover.

1. Unplug the vacuum from electrical outlet.
2. Place handle in low position and turn vacuum cleaner over so bottom side is facing up.
3. Remove the five screws in the brush cover as shown. Lift off the brush cover.
4. Grasp rotating floor brush at both ends and lift.
5. Clean strings, hair and other debris from rotating floor brush, paying particular attention to brush ends.
6. Clean strings, hair and other debris from motor pulley and drive belt areas.
7. Check drive belt carefully for wear, cuts, or stressed areas.
8. Check air passageway for obstructions. Remove debris from this area.
9. When finished cleaning, reposition floor brush and drive belt. Replace the brush cover and secure with all five screws.




WARNING:

To reduce the risk of injury from moving parts, turn the power switch OFF and disconnect plug from electrical outlet.

2



3

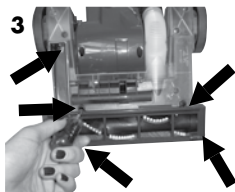

4



Maintenance and care



Replace drive belt

1. Unplug the vacuum from electrical outlet.
2. With rotating floor brush removed from vacuum cleaner (refer to page 10, steps 1-4 of check rotating floor brush and drive belt), grasp old drive belt and remove from motor pulley. Discard the old drive belt.

3. Place new drive belt over motor pulley and loop other end over rotating floor brush in the space between the bristles.

NOTE: It is important that you use only genuine BISSELL replacement belts. Generic belts may not meet the exact specifications required to keep your vacuum operating at its peak performance. The use of unbranded belts could lead to early failure of the vacuum and could void your warranty.

4. Pull the rotating floor brush firmly into position, stretching the drive belt, and place ends of rotating floor brush down into the slots on sides as shown. Alignment of brush ends in slots may be necessary to fully insert the brush.
5. Turn rotating floor brush by hand several times in the direction of motor pulley. If properly installed, drive belt will center itself on rotating brush crown.
6. Replace brush cover and all five screws.

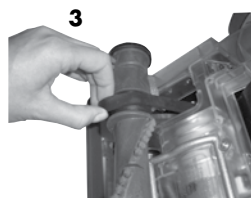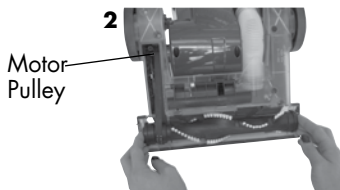

Maintenance and care

Clearing clogs

Low suction, poor pickup or no suction may be due to a clog in the vacuum cleaner. If you notice a change in the sound of the vacuum motor, check for clogs.

1. Turn power switch off. Unplug cleaner from electrical outlet.
2. Empty dirt container.
3. Check upper tank for build up or clogs.
4. If you notice a clog in the upper tank, remove the inner cyclone (see section "cleaning the upper tank" below).
5. Grasp the hose and separate it from the hose wand base. Check for a clog in the base or in the hose itself.
6. Remove the Twist 'n Snap hose from the vacuum by turning to the left. Straighten the hose and unclog with a long, narrow object such as a broom handle.
7. If the clog persists, follow the instructions for "checking the rotating floor brush and drive belt" on page 10 and inspect the passageway for obstructions.

Cleaning upper tank

1. Grasp the inner cyclone and twist to the left until the locking tabs stop the rotation. Pull down from the upper tank to remove it.
2. Wipe out the inside of the upper tank and the inner cyclone with a damp cloth moistened with water or a mild cleaning solution.
3. The inner cyclone may be washed using a mild detergent. Be sure it is completely dry before reassembling or damage to your unit may result.
4. Once cleaning is complete, replace the inner cyclone by sliding it into the upper housing. Line up the inner cyclone by ensuring the tabs on the cyclone are positioned toward the front of the unit. Push the inner cyclone in and rotate it to the right until the locking tabs stop the rotation.



CAUTION:

To reduce the risk of injury from moving parts, turn off vacuum cleaner and disconnect power plug from electrical outlet.



Troubleshooting



WARNING:

To reduce the risk of electric shock, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

Vacuum cleaner won't turn

Possible causes

1. Power cord not plugged in
2. Damaged power cord

Remedies

1. Check electrical plug
2. Unplug, check for damage, have cord replaced at an authorized service center if necessary

Vacuum cleaner won't pick up dirt

Possible causes

1. Hose not attached to suction opening
2. Crack or hole in hose
3. Broken or worn drive belt
4. Rotating floor brush bristles worn
5. Rotating floor brush jammed
6. Clog in vacuum
7. Dirt container full
8. Dirt container or upper tank not installed properly
9. Filters are dirty

Remedies

1. Grasp quick reach handle and firmly push hose wand onto the suction opening
2. Check hose and replace if needed
3. Replace drive belt, see page 11
4. Replace brush
5. Remove brush and clean debris from brush ends
6. Follow instructions on page 12 for clearing clogs
7. Empty dirt container
8. Position correctly and lock in place
9. Check and clean or replace filters, see page 9

Visible dirt escaping from cleaner

Possible causes

1. Dirt container full
2. Filters missing or installed incorrectly
3. Dirt container installed incorrectly

Remedies

1. Empty dirt container
2. Check foam motor and filters for correct installation
3. Pull out and re-insert dirt container correctly


Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

Please do not return this product to the store.

Replacement parts

Item	Part No.	Part Name
1	203-2166	Dirt Container
2	203-2165	Hose
3	203-2171	Foam Motor Filter
4	203-2172	HEPA Media Filter*
5	203-2164	Crevice Tool
6	203-1527	Dusting Brush/Upholstery Tool
7	203-1291	Pet Contour Tool™

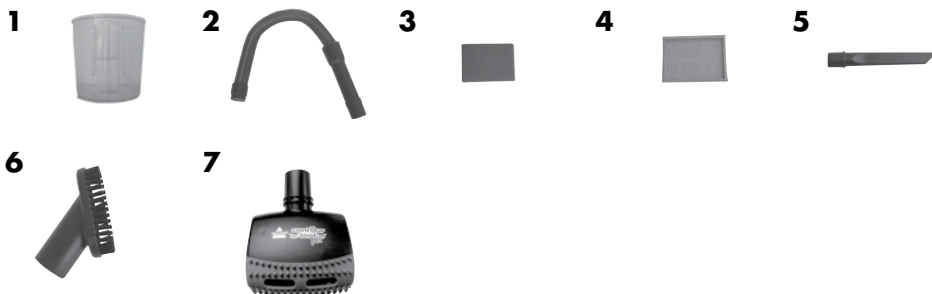

*The filter, media, not the vacuum as a whole, complies with the IEST-RP-CC001.5 HEPA Standard

If your BISSELL product should require service:

Call BISSELL Consumer Care at the numbers below and we will give you the location of a BISSELL Authorized Service Center in your area. For all other countries, contact your local in country distributor for questions, service, or repair.

If you have questions about your warranty or need replacement parts please contact the numbers below.

For Israel inquiries:

Sunday - Thursday 8 am - 5 pm

Electra Consumer Prod. 1951 Ltd.

1, Sapir St.

New Industrial Zone

Rishon Le Zion 75704

Israel

Telephone: 039633030

For Middle East & Africa inquiries:

Sunday - Thursday 9 am - 6 pm

BISSELL Middle East FZE

PO Box 61286

Office 017, Technopark Building

Jebel Ali Free Zone

Dubai

United Arab Emirates

Telephone: 971-4-881-8597

Or visit the BISSELL website - **www.bissell.com**

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____



Experts In Home Cleaning™

©2012 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 110-4583
Rev 5/12
Visit our website at:
www.bissell.com